


# DIA-COMPE DC189/DC189-ID16 REVERSE LEVER

Please read this instruction sheet carefully when installing the levers.

## ●Description

1. DC189 lever is a brake lever allowing left side and right side use.
2.  $\phi 20$  model is for a handle bar over 19mm inside diameter. (Model: DC189)
3.  $\phi 16$  model is for a handle bar under 18mm inside diameter. (Model: DC189-ID16)
4. Minimum inside diameter of handle bar is 16.5mm for model: DC189-ID16.

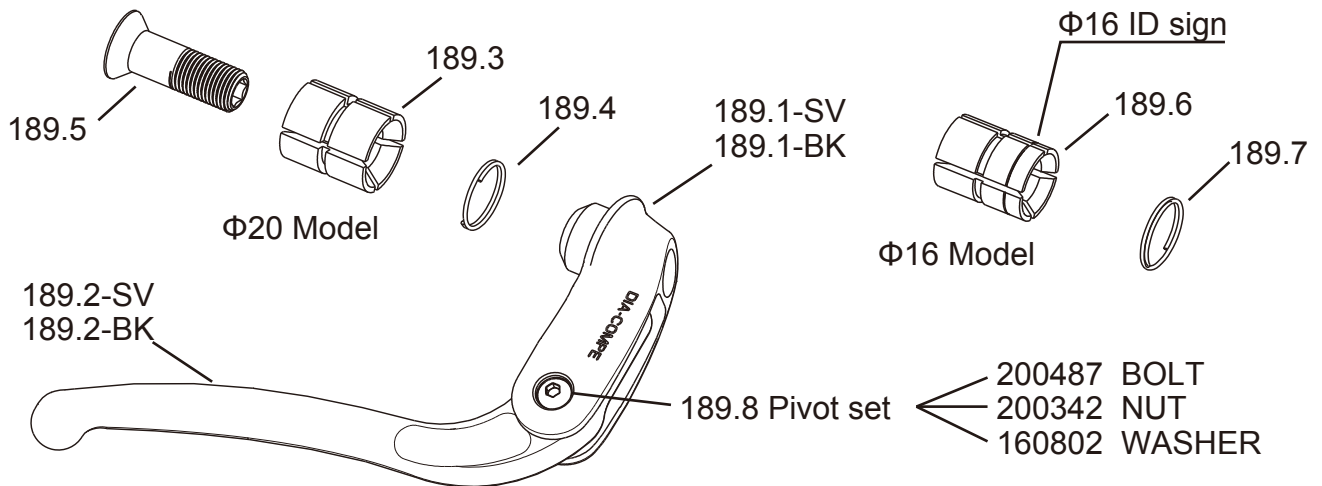

## ● Installation of the brake lever

1. First, set the inner cable into the lever handle, and then insert the cable into the bracket.(Fig. B)
2. Install the brake lever into the handle bar, and use 6mm Allen key wrench to tighten the fixing bolt. (Fig. A) Tightening torque: 6 ~ 8 N · m {60 - 80 kgf.cm}  
[If grips are required to use, assemble them before installing the brake levers]
3. Install the brake cable housing over the cable and fix it into the bracket tightly. (Fig. B)
4. The cable housing must be cut into a certain length and can be taped onto the handle bar by bar tapes.

Fig.A


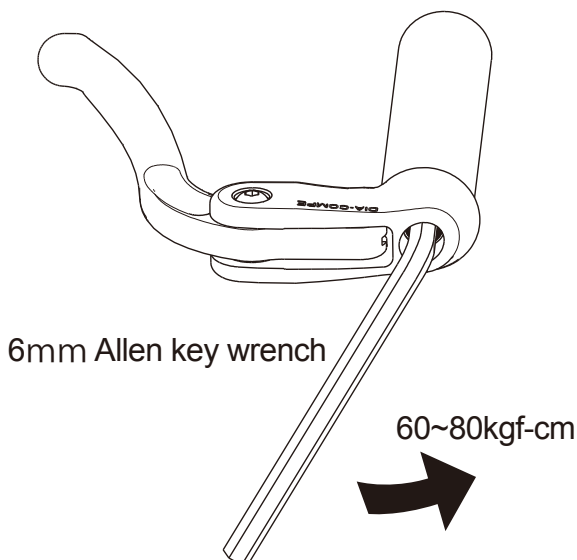


Fig.B

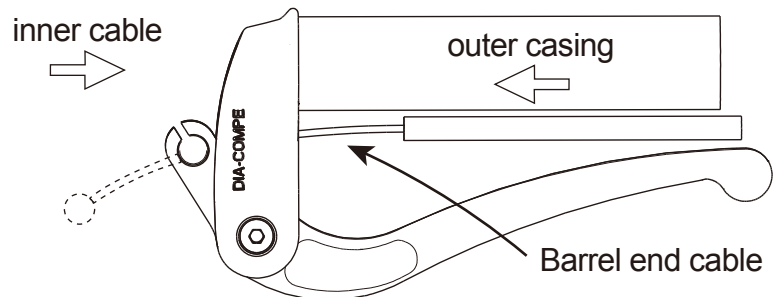

DIA-COMPE, TAIWAN CO., LTD.  
 NO.62, 35TH RD.,  
 TAICHUNG INDUSTRIAL PARK,  
 TAICHUNG, TAIWAN, R.O.C.  
 TEL: 886-4-2359-1117  
 FAX: 886-4-2359-3188 2017.Jan.